SCHISCHEK INBIN-P

Pressure switches 5 Pa ... 5.000 Pa

InBin-P Pressure switches   5 Pa ... 5.000 Pa

Electrical binary pressure / differential pressure switches
5 Pa...100 Pa with adjustable switch activation delay
24 VAC/DC supply voltage, output potential free switching contact

| InBin - P- ... |
| InBin - P- ... - 2 |
| InBin - ... - CT |
| InBin - ... - OCT |
| InBin - ... - VA |
| InBin - ... - OVA |

Subject to change !

Compact. Easy installation. Universal. Cost effective. Safe.

Type	Switch	Supply	Range	min. Setting	max. Pressure	Activation delay	Output switch	Wiring diagram
InBin- P- 100	Pressure	24 VAC/DC	0... 100 Pa	5 Pa	5.000 Pa	0...240 s	potential free contact	SB 1.0
InBin- P- 500	Pressure	24 VAC/DC	0... 500 Pa	25 Pa	5.000 Pa	–	potential free contact	SB 1.0
InBin- P-5000	Pressure	24 VAC/DC	0...5.000 Pa	250 Pa	50.000 Pa	–	potential free contact	SB 1.0
InBin- P- ... - 2	Types ...P-500 und ...P-5000 as above with additional switching output						2 × potential free contact	SB 1.0
InBin- P- ... - CT	Types as above with aluminium housing and seawater resistant coating (cable glands M16 brass nickel-plated, screws in stainless steel)							
InBin- P- ... - OCT	Types as above, offshore version with aluminium housing and seawater resistant coating (stainless steel tubes for clamping ring connection, cable glands M20 brass nickel-plated, screws in stainless steel)							
InBin- P- ... - VA	Types as above with stainless steel housing for aggressive ambient (cable glands M20 brass nickel-plated, screws in stainless steel)							
InBin- P- ... - OVA	Types as above, offshore version with stainless steel housing for aggressive ambient (tubes for clamping ring connection and screws in stainless steel, cable glands M20 brass nickel-plated)							

Product views and applications

Figures ...Bin-P-...-2

Pressure / Diff. press. switch	...Bin-P...-CT	...Bin-P...-VA	Offshore ...-OCT	Offshore ...-OVA

Description

The InBin-P-... pressure switch generation from 5...5000 Pa (acc. to type) is a revolution for differential pressure switches in HVAC systems, in chemical, pharmaceutical, industrial and offshore/onshore plants. IP66 protection, small dimensions, universal functions and technical data guarantee safe operation even under difficult environmental conditions. All pressure switches are programmable on site without any additional tools. The switching points are scalable within the maximum ranges. The integrated display is for parametrisation and an actual value indication at working mode (can be switched off as needed).
...Bin-P-...-2 switches are equipped with an additional switching output (2-stage), which can be parametrised independently.
...Bin-P-...-OCT and **...-OVA** offshore versions are equipped with stainless steel tubing Ø 6 mm.

Highlights

► For industrial use
► Power supply 24 VAC / DC
► Potential free switching contact output
► Adjustable switching threshold, hysteresis and start-up bypass time
► Adjustable switch activation delay (acc. to type)
► Integrated terminal box
► Optional second switching output (acc. to type)
► Display with backlight, can be switched off
► Password locking
► Down to −20 °C ambient temperature applicable
► Compact design and small dimension
► Robust aluminium housing (optional with seawater resistant coating) or in stainless steel
► IP66 protection
► Offshore versions with pressure tube connection for clamping ring Ø 6 mm

InBin-P_en
V02 – 18-Oct-2016

Schischek GmbH Germany, Muehlsteig 45, Gewerbegebiet Sued 5, 90579 Langenzenn, Tel. +49 9101 9081-0, Fax +49 9101 9081-77, E-Mail info-de@schischek.com

www.schischek.com

1 / 6

Technical data	...-P-100	...-P-500	...-P-5000
Supply voltage, frequency	24 VAC/DC ±20 % (19,2...28,8 VAC/DC), 50/60 Hz		
Current, power consumption	150 mA, ~ 4 W, internal fuse 500 mAT, without bracket, not removable		
Galvanic isolation	Supply for relay output min. 1,5 kV		
Electrical connection	Terminals 0,14...2,5 mm² at integrated terminal box, stripping length 9 mm, torque 0,4...0,5 Nm, equipotential bonding 4 mm²		
Cable glands	2 × M16 × 1,5 mm, for cable diameter ~ Ø 5...9 mm		
Cable glands ...-CT	2 × M16 × 1,5 mm, brass nickel-plated, for cable diameter ~ Ø 6...10 mm		
...-VA, ...-OCT, ...-OVA	2 × M20 × 1,5 mm, brass nickel-plated, for cable diameter ~ Ø 6...13 mm		
Protection class	Class I (grounded)		
Display	LC-Display, backlit, for configuration, user guidance, parameter and actual value indication. Status indicator via LEDs		
Control elements	3 buttons for configuration		
Housing material	Aluminium die-cast housing, coated. Optional with seawater resistant coating (...-CT/...-OCT) or stainless steel housing,		
	№ 1.4581 / UNS-J92900 / similar AISI 316Nb (...-VA/...-OVA)		
Dimensions (L × W × H)	Aluminium housing ~ 180 × 107 × 66 mm, stainless steel housing ~ 195 × 127 × 70 mm (each without connectors)		
Weight	~ 950 g aluminium housing, stainless steel version ~ 2,5 kg		
Ambient temperature	−20...+50 °C, storage temperature −35...+70 °C		
Ambient humidity	0...95 % rH, non condensing		
Sensor circuit	Internal circuit		
Sensor	Piezo pressure transmitter		
Pressure connection	P+ / P− sleeves Ø 4...6 mm. OCT versions have 2 stainless steel (316L) tube connections for clamp ring fittings Ø 6 mm		
Measuring range	0...100 Pa	0...500 Pa	0...5000 Pa
	Minimum measuring range is 5 % of full range (e.g. 25 Pa at ...500 Pa switch)		
Response time of sensor	T90 / 5 s		
Accuracy of pressure	< ±1 % typically, max. ±5 % of end value ±1 Pa		
Setting range hysteresis	0,1...10 Pa (factory setting 2 Pa)	0,5...50 Pa (factory setting 10 Pa)	5...500 Pa (factory setting 100 Pa)
Start delay	5 s		
Start-up bypass time (AUB)	3...240 s (factory setting 120 s)		
Switch activation delay	0...240 s (factory setting 0 s / Off)	–	–
Setting zero point	Via menu. Short-circuit mechanically both tube connectors P+ / P− for the moment of zero point setting		
Output	Potential free switching contact – breaking/making contact, adjustable per menu		
	max. rating load: 0,5 A (30 VAC/DC) – 0,1 A (250 VAC) – 0,1 A (220 VDC); min. rating load: 10 mW / 0,1 V / 1 mA		
Additional relay output (type ...-2)	–	as above	as above
Duration of life Mechanical	10 × 10^6		
Electrical (rated load)	100 × 10^3		
Wiring diagram	SB 1.0		
Scope of delivery	Pressure switch, 3 self-tapping screws 4,2 × 13 mm resp. in stainless steel (with ...CT and ...VA versions), short circuit tube		

Approbations	
CE identification	CE
EMC directive	2014/30/EU
Enclosure protection	IP66 in acc. with EN 60529
EAC	TC N RU Д-DE.AB45.B.58607

Special solutions and accessories	
...-CT	Types in aluminium housing with seawater resistant coating, parts nickel-plated
...-OCT	Offshore version in aluminium housing with seawater resistant coating, parts nickel-plated
...-VA	Types in stainless steel housing, parts nickel-plated
...-OVA	Offshore version in stainless steel housing, parts nickel-plated
MKR	Mounting bracket for round ducts up to Ø 600 mm
Kit 2	Flexible pressure tube, 2 m, inner Ø 6 mm, 2 connection nipples
Kit-S8-CBR	2 cable glands M16 × 1.5 mm, Ex-e, brass nickel-plated, for cable Ø 5...10 mm
Kit-Offs-GL-CBR	2 cable glands M20 × 1.5 mm, Ex-d, Ms-Ni, for armoured cables
Kit-PTC-CBR	2 connecting tubes for tube fittings Ø 6 mm, stainless steel 316 L

InBin-P_en
V02 – 18-Oct-2016

Electrical connection

All pressure switches require a 24 VAC/DC power supply. The electrical wiring must be realized via the integrated terminal box.
Attention: Before opening the terminal box cover, the supply voltage must be shut off! The supply has to be connected at terminals 1 ($-/\sim$) and 2 ($+/\sim$).
The start-up bypass delay (AUB) can be activated by bridging terminals 2–3. Activation is indicated by a flashing green LED.
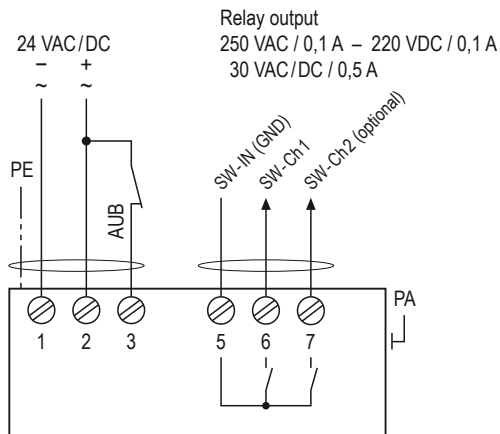
⚠ At different relay and supply voltages (24 VAC/DC) the cable installation must be considered (see "Information for Installation") ! ⚠

InBin-P-...   **SB 1.0**

24 VAC/DC
$-$ $+$
$\sim$ $\sim$

PE

AUB

Relay output
250 VAC / 0,1 A – 220 VDC / 0,1 A
30 VAC/DC / 0,5 A

SW-IN (GND)
SW-Ch1
SW-Ch2 (optional)

PA

1   2   3   5   6   7

Switching function normally open or closed can be selected via menu only.

Zero point compensation

...Bin-P-... pressure switches are equipped with a zero point compensation to adjust the module to the installation position. The pressure nipples P+ / P− must be connected with a short circuit tube and the zero point compensation performed by following the menu for parametrisation (menu 14).
Before starting the zero point compensation, the device should be connected to power supply for a minimum of 15 minutes to reach the uniform working temperature!
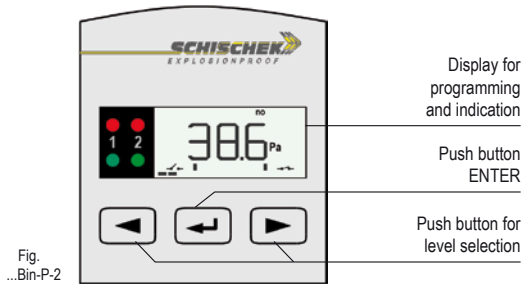
Display, buttons and parameters

Display for programming and indication

Push button ENTER

Push button for level selection

Fig. ...Bin-P-2

Change operation – parametrisation mode
To change from operation to parametrisation mode and vice versa, push ↵ ENTER button for minimum of 3 seconds. Back to operation mode with menu "save".

Indication of data logging
A flashing unit symbol (star) in the display shows that data is received and the device is working.

Password input
The default/delivery setup is 0000. In this configuration the password input is not activated. To activate the password protection (menu 15) change the 4 digits into your choosen numbers (e.g. 1234) and press ENTER.
Please keep your password in mind for next parameter change! Due to a new parameter setup the password is requested.

Important information for installation and operation

A. Installation, commissioning, maintenance

All national and international standards, rules and regulations must be complied with. Apparatus must be installed in accordance with manufacturer instructions.
If the equipment is used in a manner not specified by the manufacturer, the safety protection provided by the equipment may be impaired.

⚠ **Attention:** Apply all rules and regulation before opening the internal terminal box. Do not open cover when circuits are live!

Draw the wiring cables through the cable glands. For connection use the internal terminal box and connect equipotential bonding.
After connection install the cables in a fixed position and protect them against mechanical and thermical damage. Close all openings and ensure IP protection (min. IP66).
Avoid temperature transfer and ensure not to exceed max. ambient temperature! For outdoor installation a protective shield against sun, rain and snow should be applied.
After mounting and installation a zero point compensation must be done to ensure correct measurement results (see description).
Sensors are maintenance free. An annual inspection is recommended. Clean with damp cloth only.
Sensors must not be opened and repaired by the end user.

B. Long cabling
We recommend using shielded signal wires and to connect one end of the shield to the ...Bin-... terminal box.

C. Separate ground wires
For supply and signal wires use separate grounds.
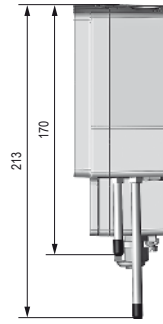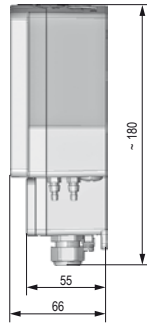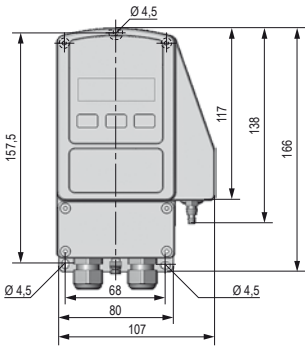
D. Relay output
Wires for safety extra-low voltage must be installed separately from other circuits. At 24 VAC/DC only supply and signal wires are permitted in one cable, in all other cases use separate or double isolated cables. An over-current protection fuse < 10 A has to be provided by the installer.
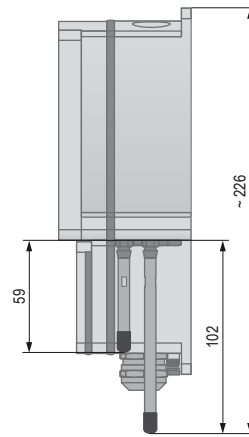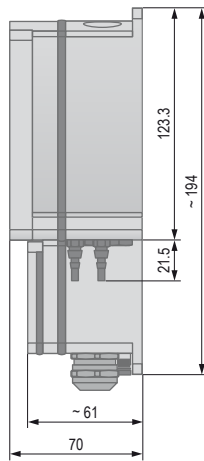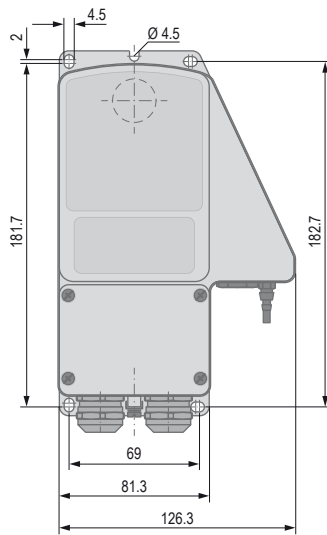
Schischek GmbH Germany, Muehlsteig 45, Gewerbegebiet Sued 5, 90579 Langenzenn, Tel. +49 9101 9081-0, Fax +49 9101 9081-77, E-Mail info-de@schischek.com

www.schischek.com

3 / 6

SCHISCHEK
EXPLOSIONPROOF

Dimensions   [mm]

Aluminium housing   ...Bin-P...-OCT

Stainless steel housing   ...Bin-P...-OVA

Parametrisation and commissioning

To change from operation to parametrisation mode push the "ENTER" button ⏎ for minimum 3 seconds.
If password protected: type password and push ⏎.
Skip menu with ▶, back to operation mode with menu "save".

Operation → Parametrisation push ⏎ for min. 3 s

Menu	Function	ENTER	Indication	Select	ENTER	Next indication	Select	ENTER	Next menu
Menu 1	**Preset** Select application	⏎ PSEt	PRO	◀ ▶ ⏎ FAN, FILT, PRO					▶
Menu 2	**Unit sensor** Select physical unit	⏎ Unit	Pa	◀ ▶ ⏎ Pa, mbar, inH₂O					▶
Menu 3	**set 1** Select switching point 1	⏎ SEt1	100.0Pa	◀ ▶ ⏎ enter setpoint					▶
Menu 4	**set 2 (optional) *** Select switching point 2	⏎ SEt2	400.0Pa	◀ ▶ ⏎ enter setpoint					▶
Menu 5	**hysteresis *** Select hysteresis	⏎ HYSt	10.0Pa	◀ ▶ ⏎ enter hysteresis					▶
Menu 6	**mode *** Select switching properties (break contact, make contact)	⏎ ModE	UP	◀ ▶ ⏎ Up, Down, Mid *	NC	◀ ▶ ⏎ nc, no			▶
Menu 7	no function – menu skip								

Continue next page

Continue Parametrisation

Menu	Function		ENTER	Indication	Select	ENTER	Next indication	Select	ENTER	Next menu
Menu 8	no function – menu skip									
Menu 9	no function – menu skip									
Menu 10	no function – menu skip									
Menu 11	no function – menu skip									
Menu 12	**time** Select bypass (AUB) time	ᵗ ΙΜΕ	↵	ΙΟΟ _enter seconds for AUB_	◄ ►	↵				►
Menu 13	**display setting** Select display	LAMP	↵	ΟΝ _on, off_	◄ ►	↵				►
Menu 14	**Zero point compensation** Sensor's calibration for its installation position	Ο-Pᵗ	↵	ͬUΝ						
Menu 15	**security** Select password protection	SECU	↵	ΟΟΟΟ _enter password_	◄ ►	↵				►
Menu 16	**save** Select: save data, discard, back to menu, factory setting	SAᴠE	↵	ΥES _Yes, no, menu, dset (default setting)_	◄ ►	↵	(operation mode after "save")			

*   **for ...Bin-P-...-2 only (2-stage)**
** **adjustable in professional mode only (menu 1)**

Menu 1 "pset" – Preset

For some applications you can select presetting to ease parametrisation. Besides fan belt ("FAN") and filter monitoring ("FILT") the professional mode ("PRO") is available for further applications.

Professional mode

Menu Ι
PRO

When this mode is selected the switching properties can be set at will per menu 5 ("hysteresis") and 6 ("mode") acc. to requirements.

Fan speed monitoring

Menu Ι
FAN

The preset "FAN" hides menu 5 ("hysteresis") and 6 ("mode") during parametrisation. The corresponding values are set automaticly.
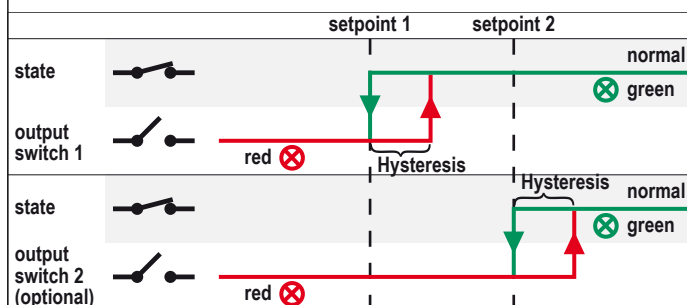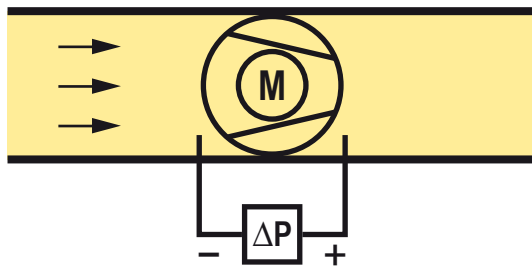
Filter monitoring

Menu Ι
FILᵗ

The preset "FILT" hides menu 5 ("hysteresis") and 6 ("mode") during parametrisation. The corresponding values are set automaticly.

InBin-P_en
V02 – 18-Oct-2016

Menu 6 "mode" – Switching properties

1. Define the device's normal range first:
   The device should indicate (green LED) when the temperature / humidity is
   - above the setpoints – mode „up-range" has to be selected.
   - under the setpoints – mode „down-range" has to be selected.
   - between the setpoints – mode „mid-range" has to be selected.
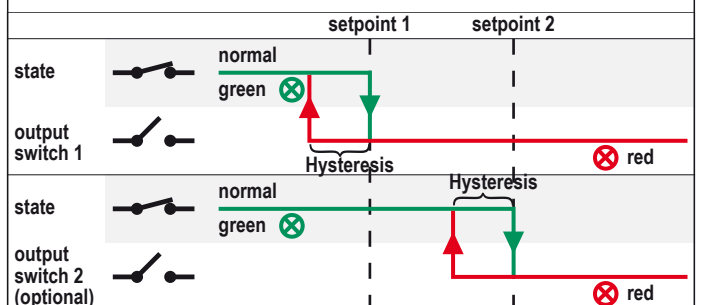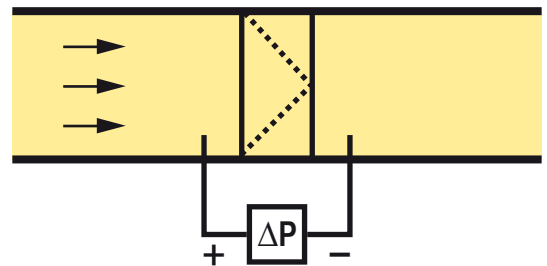   This mode is available for 2-stage devices only (...Bin-P...-2).

2. Select the switching charateristic of the output relay:
   When the measured value is in normal range, the corresponding relays shall
   - close – select "normally closed" (nc)
   - open – select "normally open" (no)

„**UP** range" – „**N**ormally **C**losed" (nc)
Normal range **above** setpoint – switch is **closed**

The switch opens when the set value is underrun.

„**UP** range" – „**N**ormally **O**pen" (no)
Normal range **above** setpoint – switch is **open**

The switch closes when the set value is underrun.

„**Down** range" – „**N**ormally **C**losed" (nc)
Normal range **below** setpoint – switch is **closed**

The switch opens when the set value is underrun.

„**Down** range" – „**N**ormally **O**pen" (no)
Normal range **below** setpoint – switch is **open**

The switch closes when the set value is underrun.

„**Mid** range" – „**N**ormally **C**losed" (nc)
Normal range **between** setpoints – switch is **closed**

2-stage devices only

„**Mid** range" – „**N**ormally **O**pen" (no)
Normal range **between** setpoints – switch is **open**

2-stage devices only