Data Sheet

J. M. CANTY JET SPRAY RING



Supplied by

247cble.com


CANTY

PROCESS TECHNOLOGY

JET SPRAY RING





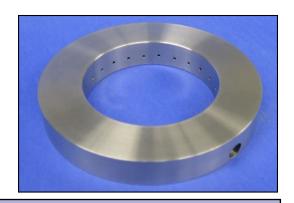

JET SPRAY RING

The Jet Spray Ring was originally designed to eliminate bothersome PVC build-up on sight glasses and used in the manufacture of heat shield tile epoxy for the US space shuttle program. Since it's original conception, the spray ring has been used on many applications in the pharmaceutical, chemical, petrochemical, and dairy industries.

APPLICATIONS

- **Process Vessels**
- Research Vessels
- Dryers

- **Pressure Chambers**
- Laboratory Reactors Incinerators
 - In Line Mixer
 - Many, many more!

THE CANTY ADVANTAGE

The Canty Jet Spray Ring generates a high pressure vortex rinsing action to remove tough deposits from sight glasses, lights, and vision systems.

The Jet Spray Ring accepts a rinsing/cleaning solution and distributes the pressurized material through the specially designed rinse ports. These rinse ports have been engineered to provide maximum cleaning power in a compact package. The Jet cleaning action expels all debris from the sight glass, providing an exceptional view into the process.

The Jet Spray Ring may be used for constant preventive or instantaneous blast-off cleaning. As a suggestion, cleaning may be timed for 5 seconds every hour, or tied in with normal CIP (Clean in Place). Any low viscosity fluid compatible with your process may be used. Common cleaning agents for powder service include air and nitrogen, while common liquid service agents include water or solvents.

FEATURES

Stainless Steel Materials:

Alloy C

Hastelloy® C276 or equal Hastelloy® C-22® or equal

Titanium Monel® Inconel® Teflon®

Mounting: ANSI and DIN sizes

150 PSI, 300 PSI, 600 PSI Pressures:

> 10 bar, 16 bar, 25 bar, 40 bar Pressures up to 5000 PSI available

1.5" ANSI and larger Sizes:

32 mm DIN and larger

JET SPRAY RING MODELS

- Open Channel: Most popular spray ring model. For use with Fuseview[™] flat gasket, non-insertion style lights, and cameras. Recommended for use with full-faced gaskets. Fluid distribution channel is accessible.
- Closed Channel: For use with Fuseview™ flat gasket, non-insertion style lights, and cameras. Fluid distribution channel is not accessible.
- Closed Channel Insertion: Use with any Canty insertion camera or light.

OPTIONS

- Tri-clamp model available (see TA7653-1 data sheet)
- Surveillance camera model available
- Sanitary bolt-on Fuseview model available
- Create an Orifice plate to prevent product sticking with a small internal diameter gasket




JM Canty Inc JM Canty Intl Ltd Buffalo, NY USA Dublin, Ireland

Ph: (716) 625 4227 Ph: +353 (01) 882 9621 Fax: (716) 625 4228 Fax: +353 (01) 882 9622

SPRAY RING SPECIFICATIONS

FLUSH MOUNT SPRAY RING

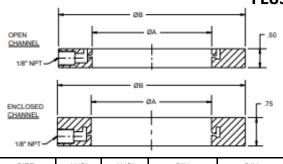


			1	
SIZE	ANSI A	ANSI B	DIN A	DIN B
1.5" [32mm]	1.70"	3.00"	56mm	88mm
2" [50mm]	2.20"	3.63"	56mm	92mm
3" [80mm]	3.20"	5.00"	81mm	127mm
4" [100mm]	4.20"	6.00"	107mm	152mm
6" [150mm]	6.20"	8.38"	157mm	213mm
8" [200mm]	8.20"	10.50"	208mm	267mm
10" [250mm]	10.20"	12.00"	246mm	305mm


Design Data

Delta P Required: 28-30 PSI above Internal pressure

Maximum Flow Rate: 1.8 gal/min at 30 psi

Maximum Pressure: 5,000 psi On certain models Consult factory for details

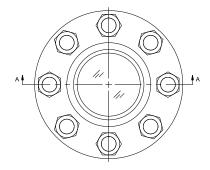

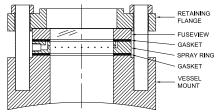


INSERTION MOUNT

LIGHT INS.

Fax: (716) 625 4228

Fax: +353 (01) 882 9622

.63" -

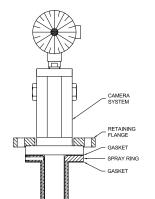


SIZE 2"-16" [76.2-406.4mm] 5.00 127mm 3" [80mm] 5.25"[133mm] 4" [100mm] 6.00" 152mm 5.25"[133mm] 2"-16" [76.2-406.4mm] 6" [150mm] 8.38" 213mm 5.25"[133mm] 2"-16" [76.2-406.4mm] 8" [200mm] 10.50" 305mm 5.25"[133mm] 2"-16" [76.2-406.4mm]

INSERTION SPRAY RING

Ordering Information

HOW TO ORDER: Select the appropriate characters to build the part number:

Dublin, Ireland

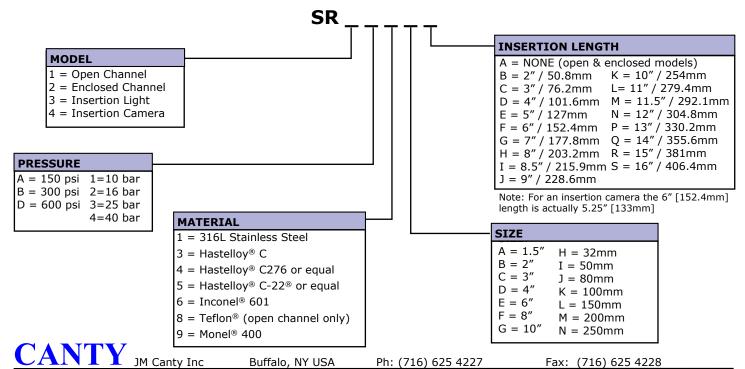

Ph: (716) 625 4227

Ph: +353 (01) 882 9621

JM Canty Intl Ltd Document P/N: TA4727-1 Rev 4